

# prophete

## Operating instructions Heated grips



### Notes on these instructions

- Please read the instructions carefully before using the product for the first time. This will help you to familiarize yourself with the product more quickly and avoid operating errors that could lead to damage or accidents. In particular, follow the safety instructions and hazard warnings.
- Keep the instructions and pass them on when selling or passing on the product.
- The current version of these instructions can be downloaded from our homepage.

### General safety instructions

#### DANGER OF ACCIDENT & DAMAGE!

- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved
- Only ride in the rain with the battery and cover in place to prevent damage to the handle.
- Avoid dropping your bike on the ends of the handlebar grips.
- If you notice smoke, unusual noises, odors or heat, stop using the product. Do not use it if it is obviously defective or damaged.
- Do not make any changes to the product.
- The product contains a rechargeable battery. It must therefore never be thrown into a fire, immersed in liquids, placed in the microwave, short-circuited, exposed to high temperatures or extremely low air pressure.
- Always ensure that the product is clean and dry before charging.
- Only charge the battery using a 5V USB power supply with a standard-compliant USB-C cable. Observe the operating instructions for the USB power supply.
- Disconnect the battery from the power supply as soon as the charging process is complete.
- After charging, close the battery with the cover, otherwise the device may be damaged.

 
### Notes on assembly

#### DANGER OF ACCIDENT & DAMAGE!

- The grips are designed to fit standard handlebars with a diameter of 22.2 mm. Please note that the handlebar must have an inner diameter of at least 17.3 mm for the battery housing to fit.
- The grips are not suitable for road bike handlebars and similar.

- Only fit the grips to handlebars of the correct size and ensure that they are fully seated on the handlebars. There is a risk of damage to the grips if they are not in the correct position or are fitted to handlebars of the wrong size.

### Assembly

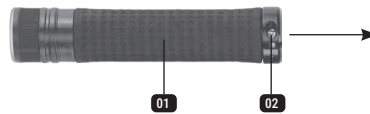


- Remove the existing handlebar grips. Make sure that the handlebars are clean and that all old grip residue or adhesive residue has been removed.
- Carefully push the complete grip assembly **01** into the handlebar end until it is fully seated.
- Tighten the screw of the locking ring **02** firmly using an Allen key (3 Nm).
- Fully charge the grips before using them for the first time.

### Operation

#### CHARGING THE BATTERY

The battery can be charged with a 5V USB power adapter or power bank:

1. Remove the battery cover to charge the battery **03**.
2. optional: you can remove the battery from the handle by turning it counter-clockwise and then pulling it out **04**.
3. Connect the charging cable to the battery:

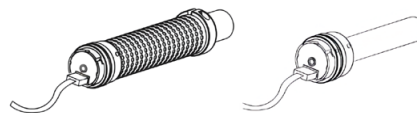

LED	CHARGING STATUS
RED (FLASHING)	Charging in progress
GREEN	Charging complete

Once the battery is fully charged, remove the charging cable. Store the battery in a safe place or reattach it to the handle. Reassemble in reverse order.

#### SWITCHING THE HANDLEBAR HEATING ON/OFF

Press the button at the end of the handle for approx. 3 seconds to switch the handlebar heating on or off.

#### BATTERY CHARGE LEVEL

The colored LED shows the current battery charge level.

LED	CHARGING LEVEL
GREEN	60 - 100 %
ORANGE	30 - 60 %
RED	10 - 30 %
RED (FLASHING)	< 10 %

Please note that battery performance is impaired by low temperatures. Storage below 10 degrees reduces the capacity and performance of the battery. For maximum performance and long battery life, we recommend storing and charging the batteries inside at around 15-22 degrees.

### Technical data

MODEL	Prophete heated grips (#5579)
HEATING TEMPERATURE	up to 37°C *
HEATING TIME	up to 3,5 h *
CHARGING TIME	up to approx. 3-4 h
BATTERY	Li-Ion (3,6 V / 850 mA / 3 Wh)

\* Depending on ambient temperature

### Care and storage instructions

- Keep the product clean to ensure safe and effective use. The surface of the product can be cleaned by hand with a damp cloth. Only use solvent-free, non-corrosive cleaning agents.
- Charge an empty battery for at least 2 hours before storing and for at least 2 hours after 3 months at the latest.
- Store the product in a cool (0-30 °C) and dry place.

### Theft protection

To prevent theft, we recommend removing the battery from the handles in public places and storing it securely.

### Disposal instructions



Consumers are legally obliged to dispose of electrical and electronic appliances separately from household waste at the end of their service life. This ensures that they are recycled in a way that protects the environment and conserves resources. You can hand them in at the collection points of the public waste disposal authorities or at the collection points set up by the manufacturers or distributors in accordance with the ElektroG. The disposal of old appliances is free of charge. Consumers have the option of returning an old appliance free of charge to a distributor obliged to take it back if they purchase an equivalent new appliance with essentially the same function. Before returning the device, remove the battery and take it to a designated disposal point. Dispose of the packaging in an environmentally friendly manner and sorted by type in the collection containers provided. Please contact your local authority for disposal options.

### Warranty information

We grant the statutory warranty period for this item. This begins from the date of purchase (receipt, proof of purchase). During the warranty period, defective products can be reported to the seller or to the specified service address. During this period, all defects attributable to material or functional faults will be rectified free of charge. This does not include normal wear and tear or damage caused by accidents, improper use, dropping/impacting or modifications to the product. No new warranty period begins with the repair or replacement of the product.

### Contact-/Serviceaddress

Prophete In Moving GmbH  
Lindenstr. 50 | D-33378 Rheda-Wiedenbrück  
www.prophete.de | info@prophete.de

### EC Declaration of Conformity



You can download the EC Declaration of Conformity at [www.prophete.de](http://www.prophete.de)