

prophete

Operating instructions E-Bike Lift



Notes on this manual

- Be sure to read this manual carefully before using the product for the first time. This will help you familiarize yourself with the product more quickly and avoid incorrect operation, which could lead to damage or accidents. Pay special attention to the safety and hazard instructions.
- Keep the assembly instructions and provide them to the new owner if the product is sold or transferred.
- The current version of this manual is available for download on our website.

Notes on assembly

RISK OF ACCIDENTS AND DAMAGE!

- This product may only be installed indoors on suitable ceilings with sufficient load-bearing capacity (wooden or concrete ceilings). The thickness of the wooden or concrete ceiling must be at least twice the drilling depth of the wall plugs.
- Use only wall plugs or fastening materials suitable for the ceiling.
- Before drilling, ensure the drill holes are at a safe distance from electrical cables, supply pipes, gas lines, or water pipes.

Notes on usage

- This product is intended for private use only and not designed for commercial applications. Use the product only as described in this manual. Any other use is considered improper and may result in property damage or personal injury. No liability is assumed for damages caused by improper or incorrect use.
- This product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience/knowledge, unless supervised or instructed by a person responsible for their safety.


RISK OF ACCIDENTS AND DAMAGE!

- Do not exceed the maximum load capacity specified in the technical data.
- Do not lift people, animals, or unstable loads with this product, as they pose an injury risk.
- Inspect the product before each use for damage, wear, or malfunctions. Do not use the product if defects are visible. Replace or repair faulty parts promptly.
- Do not modify the product.


Technical Data

MODEL	Prophete E-Bike Lift (#7662)
MAX. LOAD CAPACITY	30 kg
BIKE SIZE	24" to 29"
ROPE LENGTH	14 m



Scope of Delivery

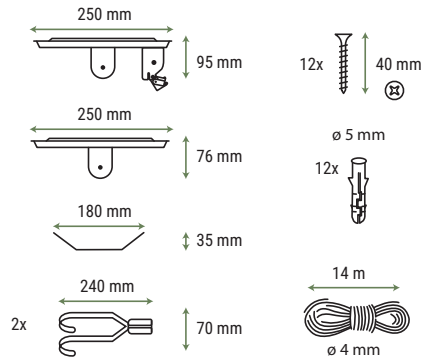


Assembly

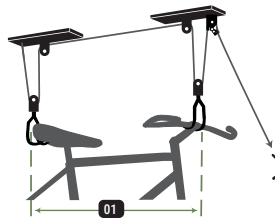


1. Measure the distance **01** between the handlebar and saddle of your bike.
2. Tie a secure double knot at the end of the rope **02**.
3. Thread the rope through the hole **04** in the suspension bracket **03** (without the rope brake).

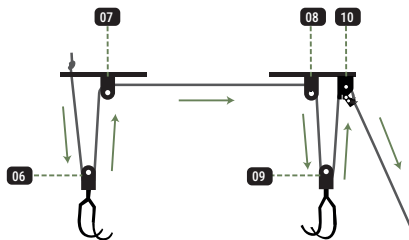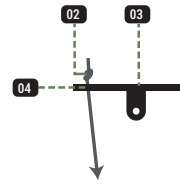

4. Route the rope through the pulleys as shown in the diagram (**06** - **10**).
5. Ensure the rope passes through the rope brake **11**.
6. Transfer the measured distances to the ceiling and drill holes **12**. For wooden beams, align holes parallel to the beam. Secure the brackets to the ceiling using screws and wall plugs.
7. Attach the rope holder to the wall **13**. Do not cut excess rope-wrap it around the holder instead **14**.

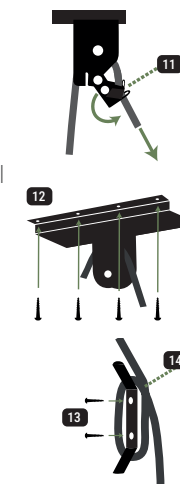

Operation

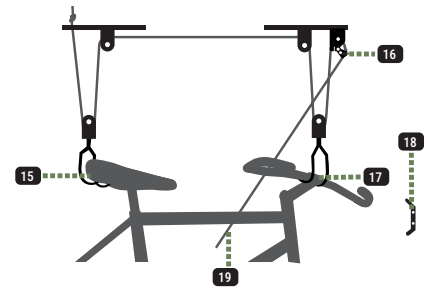

Hang the bike on the hooks via the handlebar **17** and saddle **15**.

HOISTING THE BIKE

Pull the rope **19** to lift the bike toward the ceiling. Once the bike reaches the desired height, wrap the rope multiple times around the rope holder **18**. If released prematurely, the brake clamp on the rope brake **16** prevents the bike from falling.

LOWERING THE BIKE

Pull the rope toward the rear pulley to release the brake. Tension keeps the brake open, allowing the bike to descend **19**.

Slowly release the rope to lower the bike.

Once the bike is low enough, remove it from the hooks and secure excess rope around the holder **18**.

Care Instructions

Keep the product clean to ensure safe and effective use. Clean only with solvent-free, non-corrosive agents.

Disposal Instructions

Dispose of packaging in designated recycling bins. Do not discard the product with household waste. Contact your local municipality for disposal options.

Warranty Information

The statutory warranty period begins on the purchase date (receipt required). During this period, defective products may be claimed at the point of sale or via the service address provided. Defects due to material or manufacturing faults will be repaired free of charge. Exclusions: normal wear and tear, damage from accidents, misuse, drops/impacts, or modifications. Repairs or replacements do not restart the warranty period.

Contact/Service Address

Prophete In Moving GmbH
Lindenstr. 50 | D-33378 Rheda-Wiedenbrück
www.prophete.de | info@prophete.de

prophete

INDEX-03

CE declaration of conformity

COMPANY Prophete In Moving GmbH
Lindenstr. 50
33378 Rheda-Wiedenbrück

PRODUCT GROUP Bike Parts
BRAND Prophete
NAME Bike Lift
ITEM-No. 7662

For the designated product we hereby confirm that it complies with the requirements of the following European directives:

2006/42/EG Machinery Directive

The product conforms to the directives as is proven by full compliance with the listed harmonized and non-harmonized standards:

EN ISO 12100:2010



Jörg Hawighorst
- Technical Documentation -
Prophete GmbH u. Co. KG

Rheda-Wiedenbrück, dated 03.02.2025